






# How to update firmware by Seagull Driver


# Install or select the driver you want.

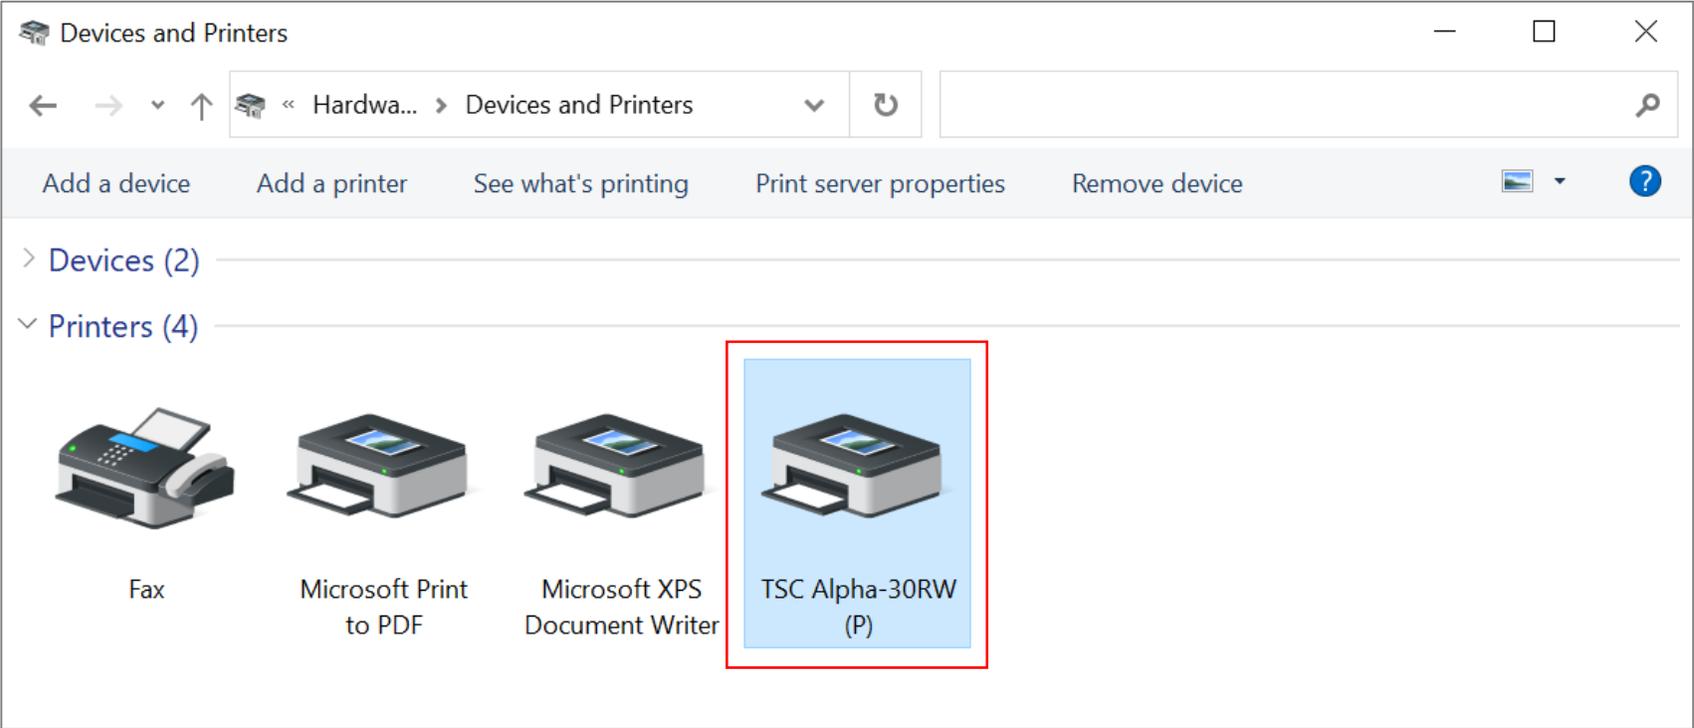


# Set the communication port in the Printer Properties.

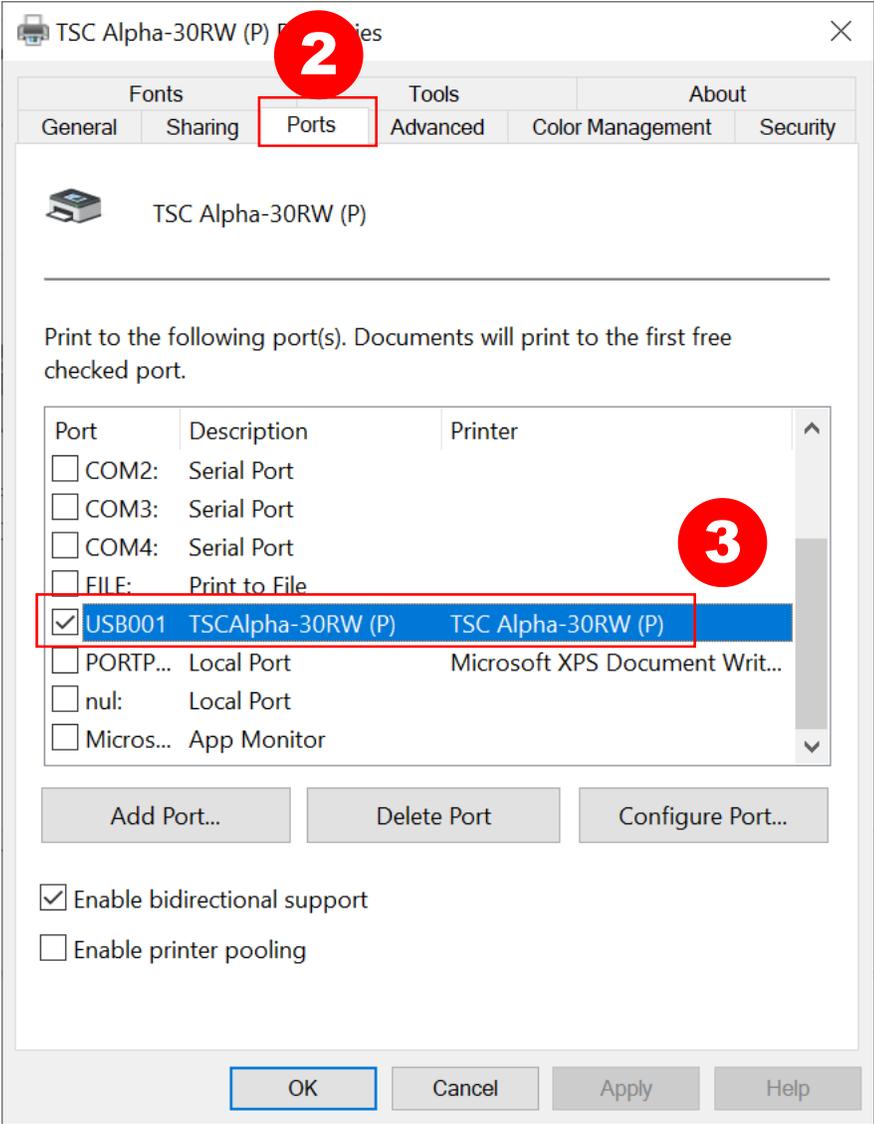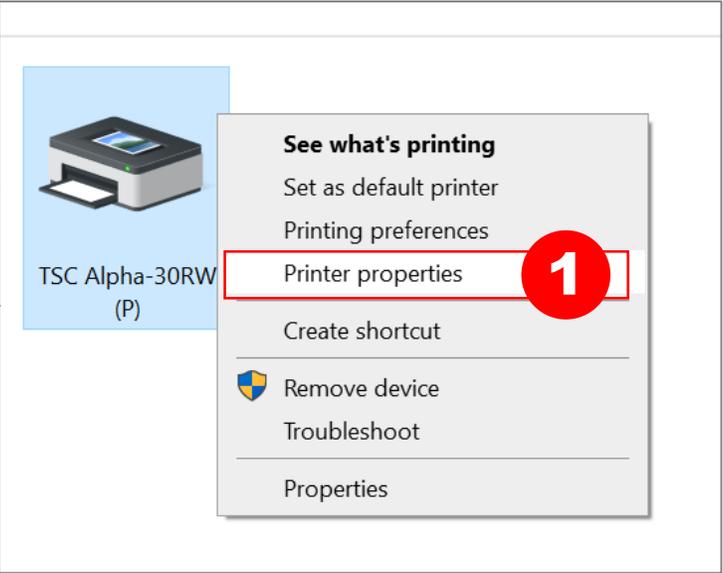

Enter the [Tools] tab. Click the button [Action] and select the function [Send File To Printer].

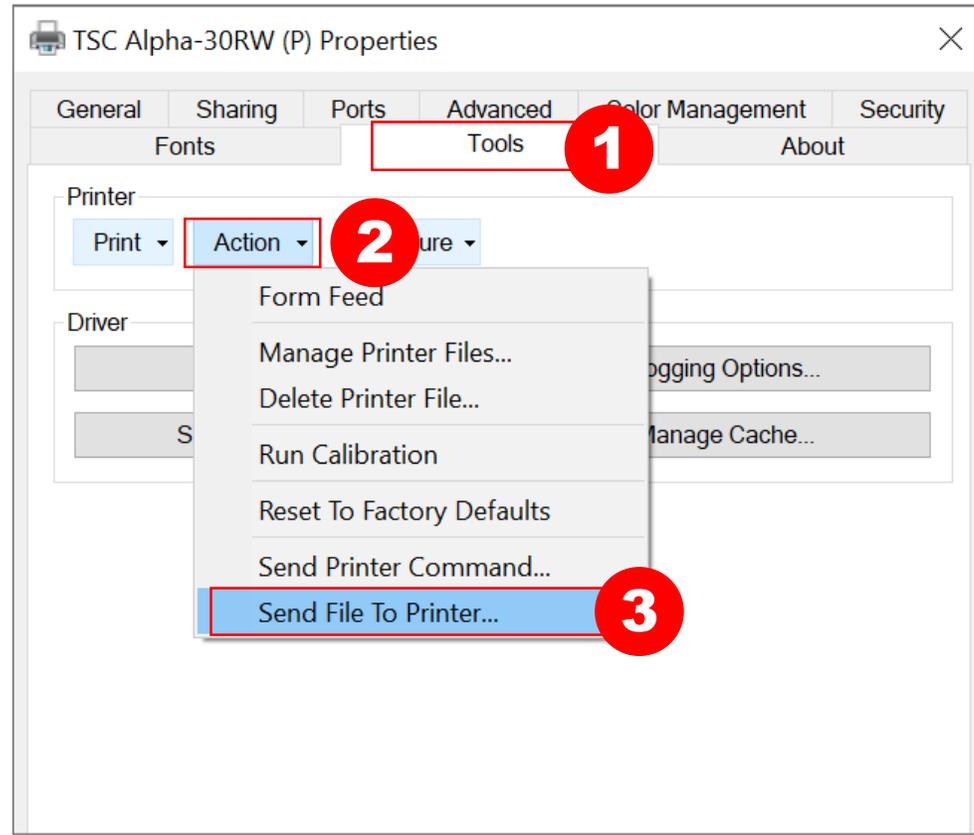

Set the Files of type as All Files (\*.\*) and select the firmware file (\*.NEW) and click the button [Open] to start firmware updating.

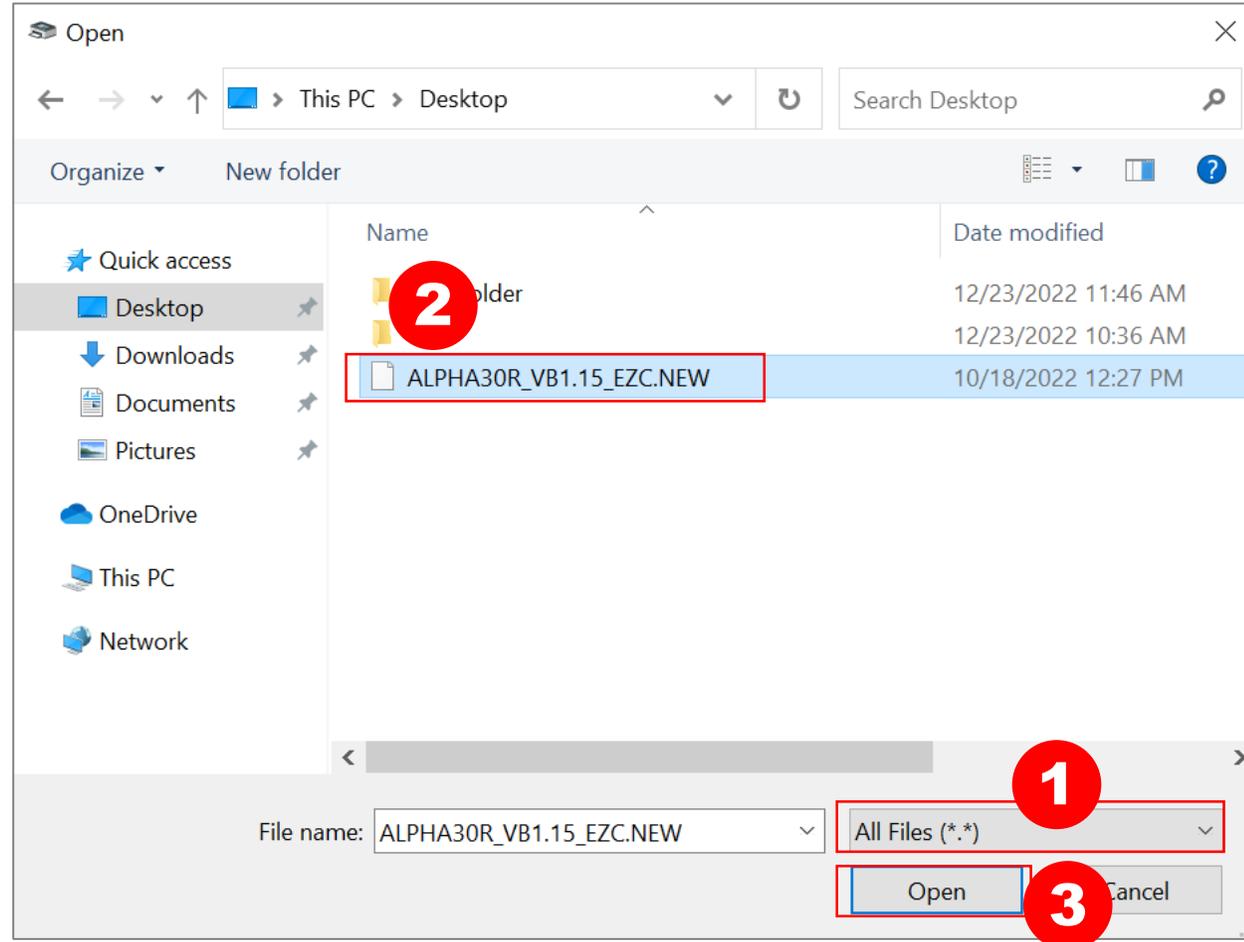

**Thank You**