

How to update firmware with Seagull Driver


DISCLAIMER

Information in this document is confidential and is subject to legal privilege. This document includes TSC Auto ID Technology Co., Ltd. (“TSC”) products. No license is expressed or implied, by estoppel or otherwise, and no intellectual property rights are granted in this document. TSC Auto ID reserves all rights to make changes, at any time, to any of the information, specification, products and product descriptions without notice. TSC Auto ID accepts no liability for the consequences of any actions taken on the basis of the information provided in this document. TSC Auto ID disclaims any expressed or implied warranty as to the use of the information acquired in this document.



This document shall be viewed by the intended recipient(s) only, and shall not be reproduced, distributed, published, shared or exchanged by or between any other parties without the prior written consent of TSC Auto ID.

TSC Auto ID and its logos are trademarks of TSC Auto ID Technology Co., Ltd., in the US and other countries. All product and company names are trademarked [™] or registered [®] trademarks of their respective holders.


Install or Select the Driver

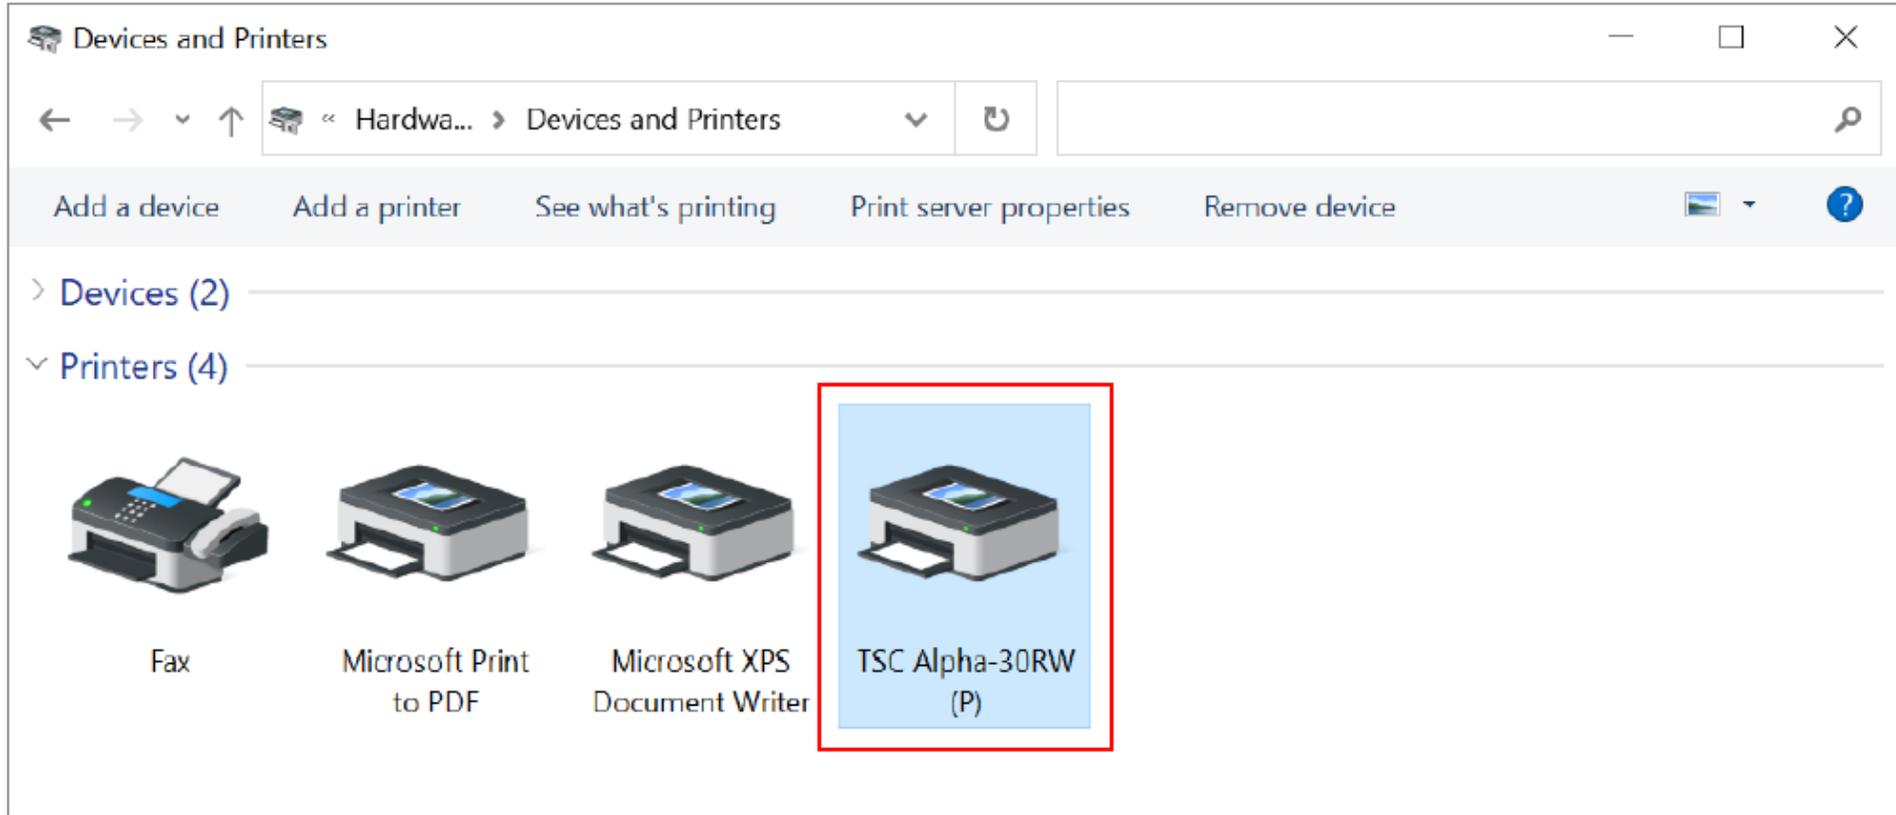

Set the communication port in the Printer Properties

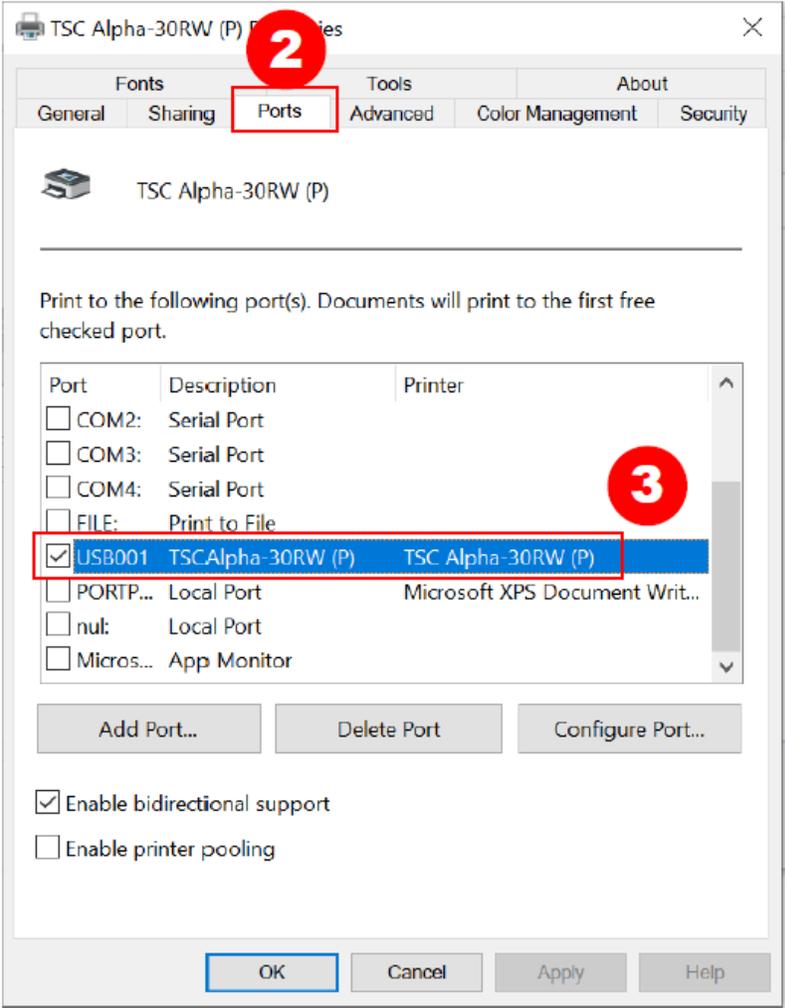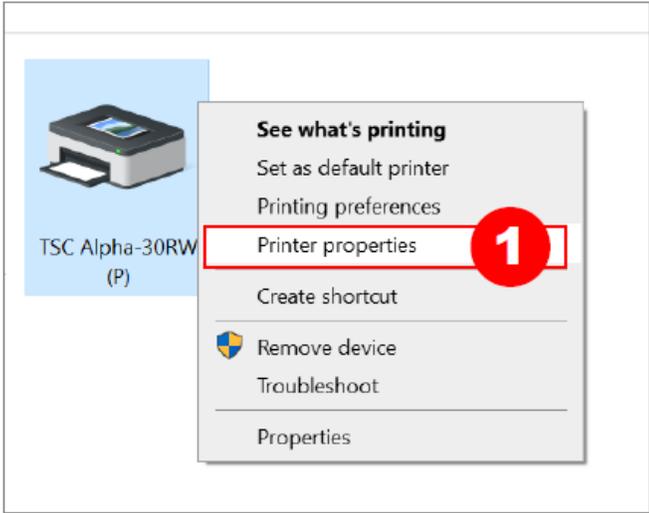


Enter [Tools] ➡ Click [Action] ➡ Select [Send File to Printer]

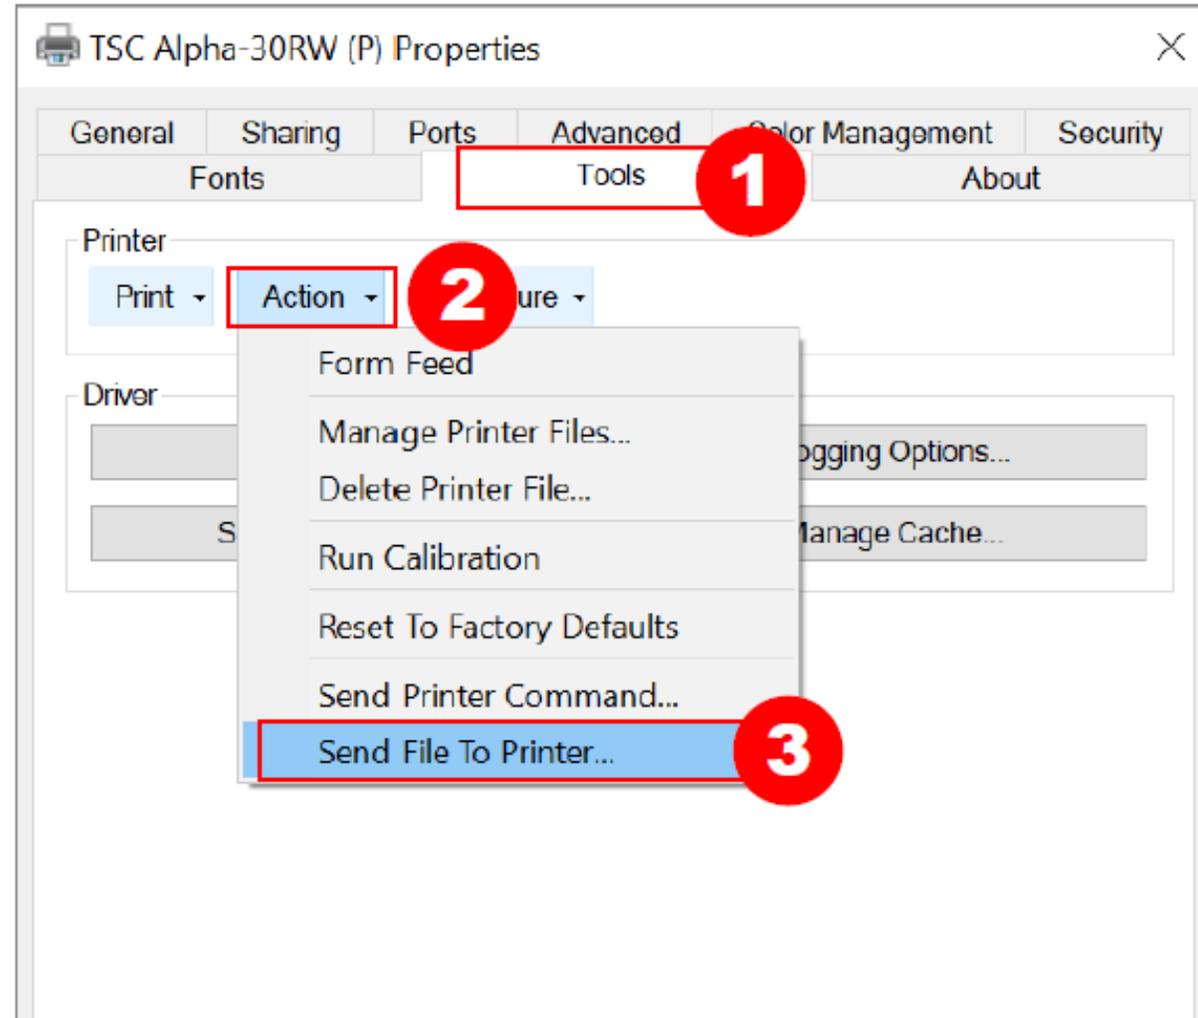

Set the Files of type as All Files (*.*)

➡ Select the firmware file (*.NEW)

➡ Click the button [Open] to start firmware updating

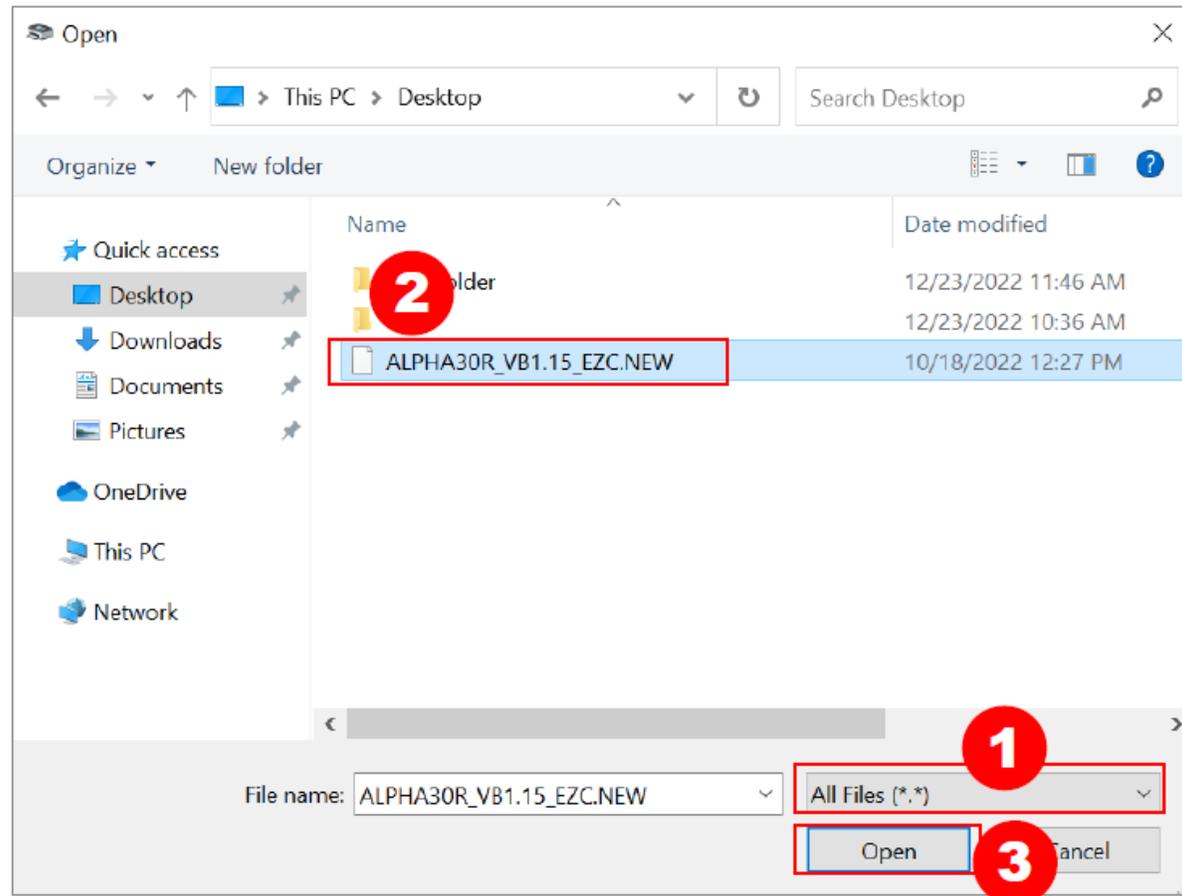



Thank You

TSC Auto ID [tscprinters.com](https://www.tscprinters.com)